

ONSIGHT HOW TO:

ONSIGHT CONNECT FOR CUBE

The Onsight Cube is an industrial wearable that can pair with Onsight Connect running on Android, iOS, and a Windows Personal Computer (PC). The Onsight Cube enables technicians to share video and audio for real-time collaboration with remote experts. This guide includes best practices for setting up and using the cube.

OVERVIEW:

- Download and install Onsight Connect
- Charge the Cube
- Login to Onsight Connect and Pair with the Cube
- Explore Cube Controls in Onsight Connect
- Explore Stand-alone Cube Functions

Downloading and installing Onsight Connect

Download the latest version of Onsight Connect to your mobile device or PC and the latest firmware version for the Cube.

1. Launch a web browser and access the download page:
<https://librestream.com/onsight-support/>
2. Download the appropriate software for your device –
Select from Android, iOS, or Windows PC.

TIP: Locate the Onsight Cube section for additional information, Manuals and Guides, as necessary.

3. Run the installation and follow all prompts onscreen.

Charging the Cube

The Onsight Cube must be adequately charged prior to use. To charge, you will need to:

1. Locate and attach the Universal Serial Bus (USB) Charging Cable to the Cube and connect the cable to a Windows PC's USB port.
TIP: Charge time can be up to 4 hours. Verify that the Charging light is green before using.
2. Disconnect the USB Charging cable.

Login to Onsight Connect and Pair with the Cube

1. Verify that Bluetooth is enabled on your Windows tablet or Smartphone device.
2. Launch Onsight Connect and login using your User Name and Password credentials.
3. Power on the Cube by pressing the **Power** button.


Onsight Connect v11.4.5

Windows v11.4.5(14327)
[+ DOWNLOADS AND UPDATES](#)
[+ MANUALS AND GUIDES](#)

Android v11.4.5(14271)
[+ DOWNLOADS AND UPDATES](#)

iOS v11.4.5(14235)
[+ DOWNLOADS AND UPDATES](#)



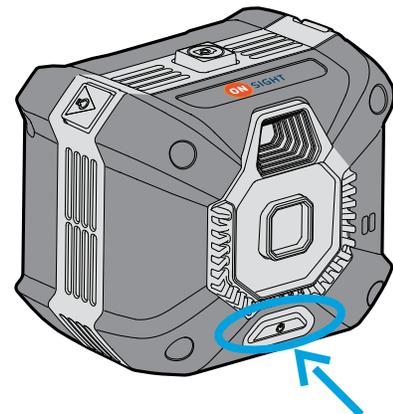


- Place the Cube near to the Tablet/Smartphone to enable pairing.
- You will hear several audio prompts.
- You may be prompted to join a Wi-Fi network — Select **JOIN** as necessary.
- A final audio prompt will say that your Host device (i.e., Windows tablet or Smart device) and Cube are now paired.
- A **Cube**  icon will display at the top right of the screen indicating when pairing is successful.



Exploring Cube Controls in OnSight Connect

Once the Cube is connected:

- The **Video Source**  icon enables you to access three Cube Modes: **Cube**, **Thermal**, and **Fusion**.
- From the **Cube**  icon you can control: **Spot Temperature**, **Temperature Scale**, and **Laser**.
TIP: To access Spot Temperature, you must switch to Thermal or Fusion modes. Click and hold within the Viewfinder to place the spot temperature indicator on a location.

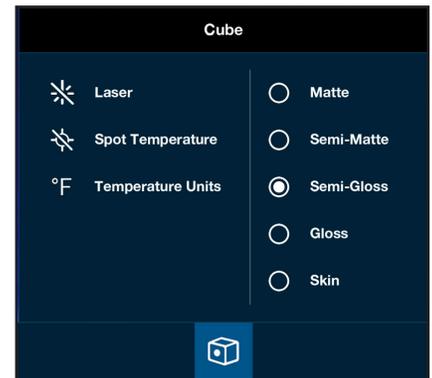

Exploring Stand-alone Cube Functions

The Cube can perform the same functions in standalone mode as when it is connected to a Host Device (Smartphone or Tablet). For example,

- Press and Release the **Capture**  icon to take a photo.
- Press and Release the **Video**  icon to start recording and then again to stop recording.
- Press and Hold the **Video**  icon to toggle between: **Thermal Mode**, **Fusion Mode** and **Video Mode**.
- Press and Release the **Illumination/Laser**  icon to toggle the laser ON and OFF.
- Press and Hold the **Illumination/Laser**  icon to toggle the laser ON and OFF.



FOR SUPPORT:

<http://librestream.com/onsight-support/>

JUST-IN-TIME TRAINING MATERIALS:

<http://librestream.com/training-deployment-adoption-materials/>