


ON SIGHT CUBE

QUICK START GUIDE


- Onsight Cube
- External Power Adapter
- Magnetic USB charging cable
- Wearable Mount, Straps and Clips
- Headband (for Rugged only)
- Monopod and Phone Attachment

FRONT VIEW

- 1 Camera
- 2 Laser
- 3 Buttons
- 4 Thermal Imager
- 5 Illumination
- 6 Microphone
- 7 Stream LED
- 8 Power Button

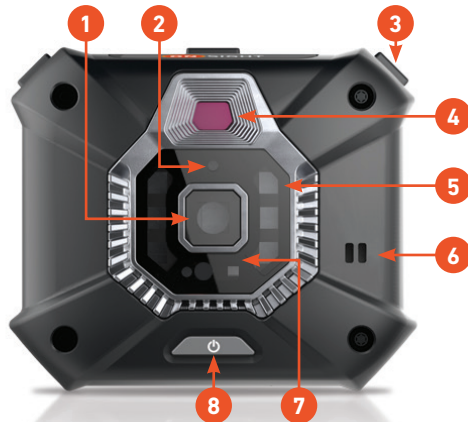


TOP VIEW

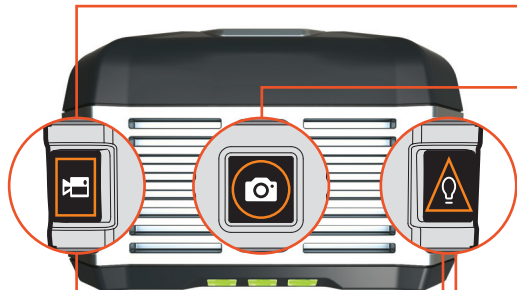

PAIRED
HOLD both to unpair
from Host

BACK VIEW

- 1 CHARGING Indicator
- 2 CONNECTION Indicator
- 3 CAMERA MODE Indicator
- 4 Mount Connector
- 5 Power/USB Port
- 6 Speaker

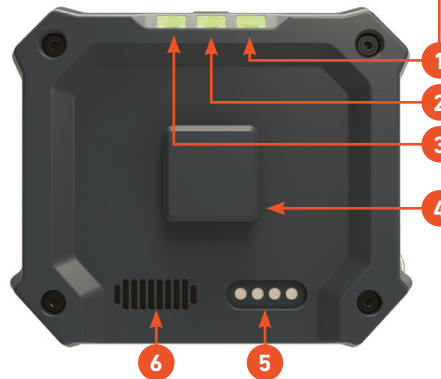

1 CHARGING INDICATOR:

On Battery Power:

- Green >40%
- Orange <40%
- Red <20%
- Flashing Red <10%

While Battery is Charging:

- Orange <100%
- Green 100%

2 CONNECTION STATUS INDICATOR:

- Blue **Flashing:** Waiting to pair to a host device over bluetooth
- Blue **Solid:** Wireless is connected but not paired to host device
- Green **Solid:** Connected to host device with a wireless connection
- White **Flashing:** Firmware update in progress

3 CAMERA MODE INDICATOR:

- Green Video
- Red Thermal
- Orange Fusion

STANDALONE

- PRESS** Start/Stop local recording
- HOLD** Toggle Video/Thermal/Fusion

PAIRED

- PRESS** Start/Stop recording on host device
- HOLD** Toggle Video/Thermal/Fusion

STANDALONE

- PRESS** Capture Local Picture

PAIRED

- PRESS** Capture Picture on Host Device
- HOLD** Capture and Share Picture

TAP ANY BUTTON TO ACCEPT A CALL

STANDALONE

- PRESS** Toggle laser
- HOLD** Toggle illumination

PAIRED

- PRESS** Toggle laser
- HOLD** Toggle illumination

CHARGE THE ONSIGHT CUBE

Connect the power adapter to the Power Port and allow the battery to fully charge. When the Cube is powered off, charging will take approximately 4 hours. The battery will charge at a slower rate if the Cube is powered on.

TURN POWER ON

Press the Power Button for one second to turn ON the Cube.

TURN POWER OFF

Press the Power Button for one second to turn OFF the Cube. When running on battery, the Cube automatically powers off after 5 minutes of inactivity.

ON SIGHT CUBE

TRANSFER FILES FROM THE CUBE TO A WINDOWS PC

- Using the USB cable, physically connect the Cube USB port to your Windows PC.
- Power on the Cube.
- Go to File Explorer on your PC.
- Navigate to the Cube/Internal Storage/DCIM to select and copy files to your PC.


PAIR WITH AN ONSIGHT-ENABLED MOBILE DEVICE

To pair the Onsight Cube to your mobile device:

- Power on the Cube.
- Log in to Onsight Connect on your mobile device.
- Hold your mobile device close to the front of the Cube to pair.
- You will hear a voice prompt 'begin pairing' and 'host connected' when complete.
- Press 'Connect' when the 'Invitation to Connect' appears.
- The Cube receives its network configuration from your paired mobile device.
- You will hear a voice prompt 'Wifi connected'.
- Once paired, the Cube is automatically selected as the video source.
- The Cube will automatically pair with that mobile device the next time you log in to Onsight Connect.


If you have forgotten your Onsight Connect Password, press 'Forgot Password' to receive an email with the temporary Password. If you do not have an Onsight Connect User Name, contact your system administrator.

Note: You need an Onsight Connect user license and a mobile device to share visuals from the Onsight Cube. For assistance, contact your internal Onsight administrator or Librestream support at support@librestream.com

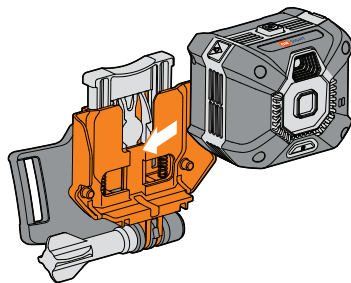


WEARABLE MOUNT

Slide the Cube to the mount.

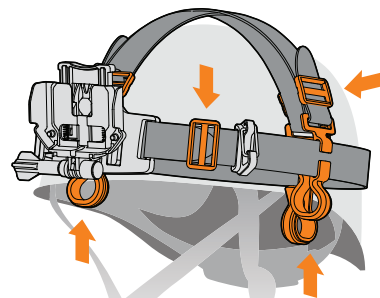


CLIMBING HELMET

Attach clips and additional straps.

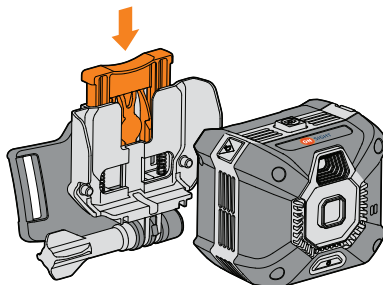


WEARABLE MOUNT

Press lever down for quick release.

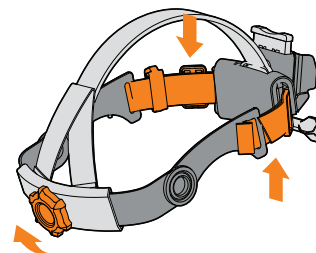


HEADBAND

Adjust straps to fit and use ratchet to tighten or loosen.

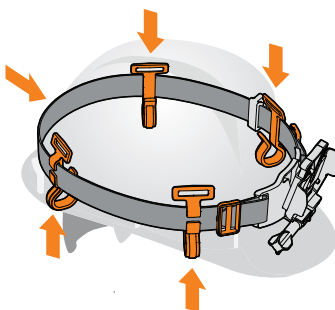

HARD HAT

Attach clips and strap.

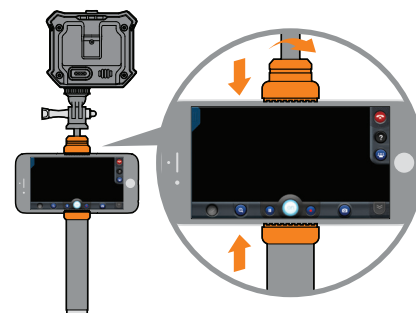

MONOPOD

Attach the phone holder and adjust the pole length by turning to lock or unlock.